


SUNEA RTS CMO VISUAL REFERENCE GUIDE



Setting for Standard Awning: Manual Up and Down Limits


STEP 1

Initiate programming by pressing both the (Up) and (Down) buttons at the same time until the motor jogs.

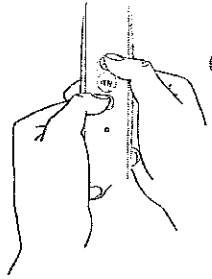


STEP 2

Check the direction of operation. Press and hold the button and confirm it moves the motor out (the motor will be in momentary fashion). To change the direction press and hold the (Stop) button until the motor jogs.

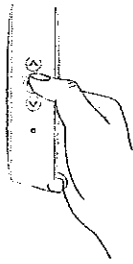


STEP 3

Bring the motor to your desired upper limit. Press and hold both the and buttons until the motor begins to move down, then release. Stop the motor where the lower limit should be set, you can adjust by pressing the or buttons.

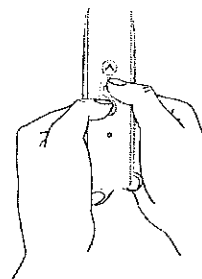


STEP 4

Press and hold the and buttons until the motor begins to move up. The motor will stop at the original upper point.

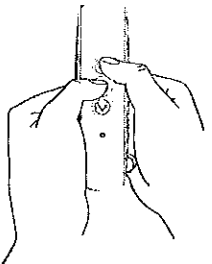


STEP 5

Press and hold the button until the motor moves to its upper limit to confirm setting.

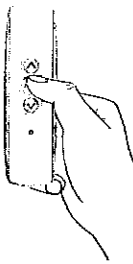

STEP 6


Press and hold the Program button on the back of the transmitter until the motor jogs. It will now operate in a maintained fashion. Double check limits as a precaution.



Setting for Cassette Awning: Automatic Up Limit


STEP 1

Initiate programming by pressing both the (Up) and (Down) buttons at the same time until the motor jogs.

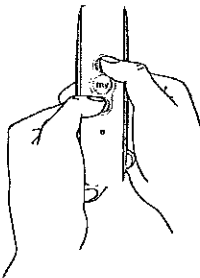


STEP 2

Check the direction of operation. Press and hold the button and confirm it moves the motor out (the motor will be in momentary fashion). To change the direction press and hold the (Stop) button until the motor jogs.

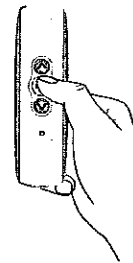


STEP 3

Bring the motor to your desired down limit. Press and hold both the and buttons until the motor begins to move up, then release.

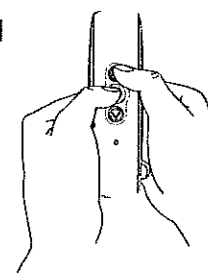


STEP 4

Press the button and stop the awning halfway

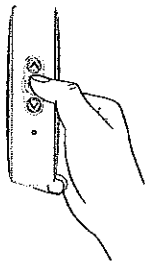

STEP 5

Press and hold the button until the motor moves to set its upper limit automatically and confirm setting.

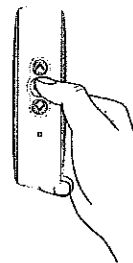

STEP 6

Press and hold the Program button on the back of the transmitter until the motor jogs. It will now operate in a maintained fashion. Double check limits as a precaution.



Please contact SOMFY for detailed installation instructions

SOMFY SYSTEMS, INC.
121 Herrod Blvd.
Dayton, NJ 08810
Phone: US: 1-800-22-SOMFY
NJ: (609) 395-1300
Fax: Sales (609) 495-8118

FLORIDA
6100 Broken Sound Pkwy. N.W.,
Suite 14
Boca Raton, FL 33487
Phone: (877) 227-6639
Fax: (561) 995-7502

CALIFORNIA
520 West Central Ave., Suite A
Brea, CA 92821
Phone: (877) 727-6639
Fax: (714) 265-1278

somfy®